

USB Drive

USB 1.1

Type	Model		Plug/Play	Restart	STR (S3)	Result
			10X	5X	5x	
Camera	Huaerte	Web Eye PC-9	OK	OK	OK	OK
	Logitech	QuickCam IM (V-UAM27)	OK	OK	OK	OK
		QuickCam Messenger (V-UM14)	OK	OK	OK	OK
		QuickCam Zoom (V-UW21)	OK	OK	OK	OK
	MSI	StarCam 370i	OK	OK	OK	OK
		StarCam Mini	OK	OK	OK	OK
StarCam Sport 300K		OK	OK	OK	OK	
Floppy	IMATION	LKM-FK73-D	OK	OK	OK	OK
	Iomega	Z100USB ZIP	OK	OK	OK	OK
		BXXU0130 USB Floppy Powered Drive	OK	OK	OK	OK
	NEC	UF0002	OK	OK	OK	OK
Joystick	Logitech	Wingman Force 3D (J-UC10)	OK	OK	OK	OK
		WingMan Formula Force GP (E-UD4)	OK	OK	OK	OK
Keyboard	Cherry	210XX	OK	OK	OK	OK
		Cherry RS 6000 USB ON	OK	OK	OK	OK
	BTC	Keyboard 5200 TU	OK	OK	OK	OK
	Logitech	Cordless Freedom Optical (Y-PJ20)	OK	OK	OK	OK
		Cordless MX Duo	OK	OK	OK	OK
		Internet Navigator Keyboard (Y-BF37)	OK	OK	OK	OK
	Microsoft	Basic Wireless Optical Desktop 1.1	OK	OK	OK	OK
		Wireless Optical Desktop 1.0A	OK	OK	OK	OK
Mouse	Logitech	MX700 Cordless Optical Mouse (M-RY81)	OK	OK	OK	OK
		Wheel Mouse (M-BQ85)	OK	OK	OK	OK
		Cordless Freedom Optical (Y-PJ20)	OK	OK	OK	OK
		Cordless Optical Mouse (M-RM63)	OK	OK	OK	OK
	Microsoft	Basic Wireless Optical Desktop 1.1	OK	OK	OK	OK
		IntelliMouse Optical	OK	OK	OK	OK
		Wireless Optical Desktop 1.0A	OK	OK	OK	OK
LAN (Wireless)	PCI	GW-US11H (Wireless 802.11b)	OK	OK	OK	OK
	SMC	2664W (Wireless 802.11b)	OK	OK	OK	OK
Printer	Canon	I905D	OK	OK	OK	OK
		HP	LaserJet 1015	OK	OK	OK
		Photosmart 245	OK	OK	OK	OK
		Photosmart 7660	OK	OK	OK	OK
		Deskjet 5740	OK	OK	OK	OK
		PSC 1610 All-in-one	OK	OK	OK	OK
	Lexmark	X6150 4 Powerful Features in 1	OK	OK	OK	OK
		Lexmark P707 Color Jetprinter	OK	OK	OK	OK
Scanner	BenQ	S2W 5300U	OK	OK	OK	OK
	EPSON	Expression 1600 Scanner	OK	OK	OK	OK
	HP	Scanjet 3570C	OK	OK	OK	OK
Sound Box	Creative	Sound Blaster Live! 24bit External	OK	OK	OK	OK
Speaker	Microsoft	Digital Sound System 80	OK	OK	OK	OK

USB 2.0

Type	Model		Plug/Play	Restart	STR (S3)	Result
			10X	5X	5x	
Blu-ray Drive	I-O DATA	BRD-UM2	OK	OK	OK	OK
Card Reader	Apacer	AR020 Card Reader	OK	OK	OK	OK
	Transcend	TS-RDM5W Multi-Card Reader M5	OK	OK	OK	OK

	MSI	StartReader 52 in 1	OK	OK	OK	OK
DVD-Dual	ASUS	DRW-1608P3S-U	OK	OK	OK	OK
	LG	GSA-5120D (12R/4RW/16X) (USB2.0+1394)	OK	OK	OK	OK
	Lite-On	DX-8A1P	OK	OK	OK	OK
		LH-20A1PX	OK	OK	OK	OK
		SDW-431SX (4R,2RW,8X)	OK	OK	OK	OK
	MSI	MS-8408E-A DVD Dual (8R,2RW,8X)	OK	OK	OK	OK
	SONY	DRX-500ULX (4R, 2RW, 8x) (USB2.0+1394)	OK	OK	OK	OK
DRX-830UL (USB 2.0+1394)		OK	OK	OK	OK	
Flash Drive	Apacer	AH222 Handy Seno 4GB	OK	OK	OK	OK
	Kingston	DataTraveler DTR/2GBFE	OK	OK	OK	OK
	SanDisk	Cruzer Contour 8GB	OK	OK	OK	OK
	Sony	MicroVault 8GB	OK	OK	OK	OK
	Transcend	TS4GJFV35 4GB	OK	OK	OK	OK
		TS16GJFV60 16GB	OK	OK	OK	OK
		TS32GJFV60 32GB	OK	OK	OK	OK
Graphics Card	KaiJet	KJV1920	OK	OK	OK	OK
Hard Disk	Data FAB	MD3A-USB2A	OK	OK	OK	OK
	Iomega	External HDD 120GB	OK	OK	OK	OK
		Desktop HDD DHD120-C 120GB	OK	OK	OK	OK
	Maxtor	Personal Storage 5000XT 250G(1394&USB2.0)	OK	OK	OK	OK
	Seagate	FreeAgent Pro ST305004FPM103-RK	OK	OK	OK	OK
HD Drive	HP	HD100	OK	OK	OK	OK
LAN	D-LINK	DUB-E100	OK	OK	OK	OK
	SMC	SMC2209USB/ETH	OK	OK	OK	OK
LAN (Wireless)	3COM	3CRUSB10075	OK	OK	OK	OK
	Buffalo	WLI-U2-KG54	OK	OK	OK	OK
	Lemel	LM-WLG600U	OK	OK	OK	OK
	SMC	SMC2862W-G	OK	OK	OK	OK
	Zonet	ZEW2501	OK	OK	OK	OK
Scanner	BenQ	S2W 5450	OK	OK	OK	OK
		5250C	OK	OK	OK	OK
	Canon	CanoScan 3000	OK	OK	OK	OK
	Epson	Perfection 3200 Photo (USB2.0+1394)	OK	OK	OK	OK
	HP	Scanjet 4570C	OK	OK	OK	OK
		4890 Photo Scanner	OK	OK	OK	OK
TV Box	AverMedia	Volar X A815 (DVB-T)	OK	OK	OK	OK
	UPMOST	DVB870 (DVB-T)	OK	OK	OK	OK