

USB 1.1

Type	Model		Plug/Play 10X	Restart 5X	STR (S3) 5x	Result
Camera	Logitech	QuickCam Connect (V-UBQ42)	OK	OK	OK	OK
	Microsoft	LifeCam VX-3000	OK	OK	OK	OK
	MSI	StarCam Mini	OK	OK	OK	OK
		StartCam Sport 300K	OK	OK	OK	OK
Floppy	Iomega	Z100USB ZIP	OK	OK	OK	OK
		BXXU0130 USB Floppy Powered Drive	OK	OK	OK	OK
	NEC	UF0002	OK	OK	OK	OK
Headphone	Logitech	ClearChat Comfort (A-00009)	OK	OK	OK	OK
	Microsoft	LifeChat LX-3000	OK	OK	OK	OK
Joystick	Logitech	ChillStream (G-UH21)	OK	OK	OK	OK
		Driving Force GT (E-X5C19)	OK	OK	OK	OK
		Extreme 3D Pro Twis Handle Joystick (J-UK17)	OK	OK	OK	OK
Keyboard	BTC	Keyboard 5200 TU	OK	OK	OK	OK
	Cherry	Cherry RS 6000 USB ON	OK	OK	OK	OK
	Logitech	Cordless Desktop EX110	OK	OK	OK	OK
		Cordless Desktop LX310 Laser	OK	OK	OK	OK
		Wave Keyboard (Y-UV90)	OK	OK	OK	OK
	Microsoft	Wireless Laser Desktop 6000	OK	OK	OK	OK
		Wireless Media Desktop 1000	OK	OK	OK	OK
Mouse	Logitech	Cordless Desktop EX110	OK	OK	OK	OK
		Cordless Desktop LX310 Laser	OK	OK	OK	OK
		G1 Optical Mouse (M-BP82)	OK	OK	OK	OK
		Value Optical Mouse (M-BT83)	OK	OK	OK	OK
	Microsoft	ARC Mouse	OK	OK	OK	OK
		Comfort Optical Mouse 3000	OK	OK	OK	OK
		Wired Desktop 500 Basic Optical Mouse	OK	OK	OK	OK
		Wireless Laser Desktop 6000	OK	OK	OK	OK
		Wireless Media Desktop 1000	OK	OK	OK	OK
LAN (Wireless)	PCI	GW-US11H (Wireless 802.11b)	OK	OK	OK	OK
Printer	Canon	I905D	OK	OK	OK	OK
	EPSON	Stylus CX5500	OK	OK	OK	OK
	HP	LaserJet 1015	OK	OK	OK	OK
		Deskjet 5740	OK	OK	OK	OK
		PSC 1610 All-in-one	OK	OK	OK	OK
	Lexmark	X6150 4 Powerful Features in 1	OK	OK	OK	OK
Lexmark P707 Color Jetprinter		OK	OK	OK	OK	
Scanner	BenQ	S2W 5300U	OK	OK	OK	OK
	EPSON	Stylus CX5500	OK	OK	OK	OK
	HP	PSC 1610 All-in-one	OK	OK	OK	OK
		Scanjet 3570C	OK	OK	OK	OK
		Scanjet G2410 Flatbed Scanner (GRLYB-0209)	OK	OK	OK	OK
Lexmark	X6150 4 Powerful Features in 1	OK	OK	OK	OK	
Sound Box	Creative	Sound Blaster Live! 24bit External	OK	OK	OK	OK
Speaker	Logitech	V10 Notebook Speakers (S-0194B)	OK	OK	OK	OK
	MSI	SyrenSpeaker mini (USB2006)	OK	OK	OK	OK

USB 2.0

Type	Model		Plug/Play	Restart	STR (S3)	Result
			10X	5X	5x	
Camera	Logitech	QuickCam Pro For Notebooks (V-UBU48)	OK	OK	OK	OK
	Microsoft	LifeCam NX-6000	OK	OK	OK	OK
Card Reader	Apacer	AR020 Card Reader	OK	OK	OK	OK
	Transcend	TS-RDM5W Multi-Card Reader M5	OK	OK	OK	OK
Flash Drive	Apacer	AH222 Handy Seno 4GB	OK	OK	OK	OK
	Kingston	DataTraveler DTR/2GBFE	OK	OK	OK	OK
	SanDisk	Cruzer Contour 8GB	OK	OK	OK	OK
	Sony	MicroVault 8GB	OK	OK	OK	OK
	Transcend	TS4GJFV35 4GB	OK	OK	OK	OK
		TS16GJFV60 16GB	OK	OK	OK	OK
TS32GJFV60 32GB		OK	OK	OK	OK	
Graphics Card	KaiJet	KJV1920	OK	OK	OK	OK
Hard Disk	Acer	Mobile Storage Solution (EA21G-320G) 320G	OK	OK	OK	OK
	lomega	External HDD 120GB	OK	OK	OK	OK
	Maxtor	OneTouch 4 SMT303203OTM301 320GB	OK	OK	OK	OK
	OCZ	CORE Series V2 SSD2-2C60G 60GB (SATA2/USB2.0)	OK	OK	OK	OK
	Seagate	FreeAgent Pro ST305004FPM103-RK (USB2.0/eSATA /1394)	OK	OK	OK	OK
	Snake	EU-3500C (USB2.0/eSATA)	OK	OK	OK	OK
	WD	My Book Home Edition WD5000H1CS-00 (USB2.0/eSATA /1394)	OK	OK	OK	OK
LAN (Wireless)	3COM	3CRUSB10075	OK	OK	OK	OK
	BUFFALO	WLI-UC-G300N	OK	OK	OK	OK
	D-Link	Wireless G USB DWA-110	OK	OK	OK	OK
		Wireless N USB DWA-140	OK	OK	OK	OK
	Lemel	LM-WLG600U	OK	OK	OK	OK
	SMC	SMC2862W-G	OK	OK	OK	OK
		SMCWUSBS-N	OK	OK	OK	OK
Zonet	ZEW2501	OK	OK	OK	OK	
Optical Drive	ASUS	DRW-1608P3S-U	OK	OK	OK	OK
	BUFFALO	DVSM-P58U2/BW-AP (±R 8X, ±RW6X,RAM 5X,±R DL 6X)	OK	OK	OK	OK
	HP	HD100	OK	OK	OK	OK
	I-O DATA	BRD-UM2	OK	OK	OK	OK
	Lite-On	DX-8A1P	OK	OK	OK	OK
		LH-20A1PX	OK	OK	OK	OK
Sony	DRX-830UL (USB 2.0+1394)	OK	OK	OK	OK	
Printer	SAMSUNG	Laser MFP SCX-4300	OK	OK	OK	OK
Scanner	BenQ	5250C	OK	OK	OK	OK
	EPSON	Perfection V10 (J231A)	OK	OK	OK	OK
	HP	4890 Photo Scanner	OK	OK	OK	OK
	SAMSUNG	Laser MFP SCX-4300	OK	OK	OK	OK
TV Box	AverMedia	Volar X A815 (DVB-T)	OK	OK	OK	OK
	LifeView TV	Walker Hybrid LR518TAR-R	OK	OK	OK	OK
	MSI	Digi VOX A/D	OK	OK	OK	OK
	UPMOST	DVB870 (DVB-T)	OK	OK	OK	OK