

## CDROM

Model		Boot from CD	Detect & Read data	CD WinBench 99
MSI	C52(MS-8152)	OK	OK	OK

## DVD ROM

Model		Boot from CD	Detect & Read data	CD WinBench 99	VCD & DVD Play
ASUS	DVD-E616P3	OK	OK	OK	OK
ASUS	DVD-E818A	OK	OK	OK	OK
BenQ	DD165G	OK	OK	OK	OK
BenQ	1650V	OK	OK	OK	OK
LG	GDR-H30N	OK	OK	OK	OK
LG	GDR-8163B	OK	OK	OK	OK
LITEON	SOHD-167T	OK	OK	OK	OK
MSI	D16(MS-8216)	OK	OK	OK	OK
Pioneer	DVD-128D	OK	OK	OK	OK
Pioneer	DVD-122E	OK	OK	OK	OK
SONY	DDU1621	OK	OK	OK	OK
源興	BDV316E	OK	OK	OK	OK
SAMSUNG	TS-H353	OK	OK	OK	OK

## CD-RW

Model		Detect & Read data	CD Copy
LITE-On	LTR-52327S	OK	OK
SONY	CRX230A	OK	OK

## Combo (CD-RW/DVD-ROM)

Model		Detect & Read data	CD Copy
BenQ	CB523C	OK	OK
LG	GCC-4521B	OK	OK
SONY	CRX300A	OK	OK

## DVD Dual (DVD-RW/DVD+RW)

Model		Detect & Read data	DVD Copy
ASUS		OK	OK
Gigabyte		OK	OK
LG		OK	OK
LG		OK	OK
PHILIPS		OK	OK
Pioneer		OK	OK
Plextor		OK	OK
SAMSUNG	TS-H652	OK	OK
SAMSUNG	TS-H552	OK	OK
SONY	BWU-100A	OK	OK
Asus	DRW-1814BLT	OK	OK
LITE-ON	LH-2B1S	OK	OK
Pioneer	DVR-212CHG	OK	OK
Pioneer	BDC-S02BKZ	OK	OK
Samsung	TS-H653	OK	OK