
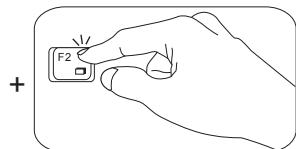


How to Use the [Fn] Buttons/ 操作[Fn]鍵

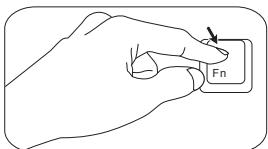

Use the [Fn] buttons on the keyboard to activate the specific applications or tools.

* The descriptions mentioned here are for reference only and may be optional supported depending on the models users purchased.

使用鍵盤左下 [Fn] 鍵來啓動特定程式功能或工具。藉由下列快速啟動鈕的協助，有助於您在使用時更加流暢。

*下列功能敘述僅供參考，部份功能依您所購買型號而有所不同。

* + Enable or disable the Webcam.
開啟或關閉網路視訊攝影機。

* + Enable or disable the following the 3 combination: Wireless LAN (WiFi)/ Wireless LAN (WiFi) & Bluetooth/ Wireless LAN (WiFi) & 3G (optional).
三種開關模式：無線網路(WiFi)/ 無線網路(WiFi)和藍芽/ 無線網路(WiFi)和3G(選配)

* + Enable or disable the Bluetooth.
開啟或關閉藍牙。

* + Switch the display output mode between the LCD, external monitor and both.
切換顯示輸出模式成 LCD、外接顯示器或二者皆用。

* + Enable or disable the touchpad.
開啟或關閉觸控板功能。



* **Fn + P1** Launch the user defined application.

開啟使用者自訂的應用程式。



* **Fn + ECO** Switch among various power saving modes provided by ECO Engine.

在多種ECO省電模式中進行切換。



Z Force the computer into sleep state (depending on the system configuration).

強迫電腦進入睡眠模式 (視系統配置而定)。



 
* **Fn + 3G** Enable or disable the 3G function.

開啟或關閉3G功能。




▲ Increase the LCD brightness.

增加LCD亮度。



▼ Decrease the LCD brightness.

 降低LCD亮度。




音量 - Decrease the built-in speaker's volume.

降低內建喇叭的音量。



音量 + Increase the built-in speaker's volume.

 提高內建喇叭的音量。



静音 Mute the built-in speaker.

內建喇叭靜音。