



# How to check the LAN chip on notebook?

## 1. Check HW ID in Device Manager

E2400: E0A1

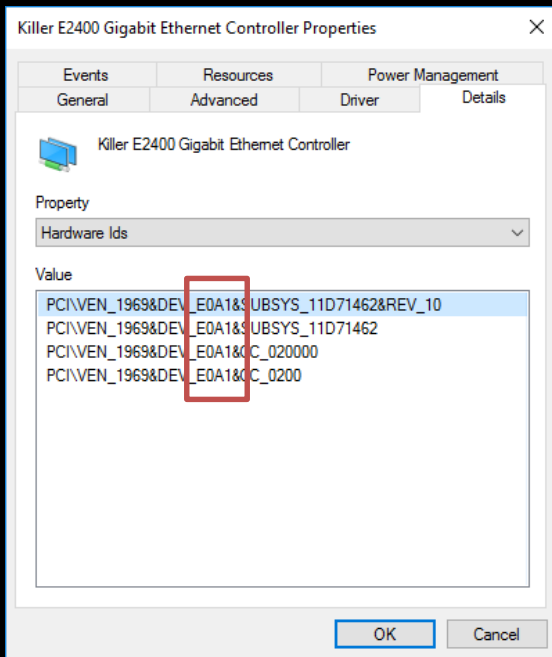

E2500: E0B1

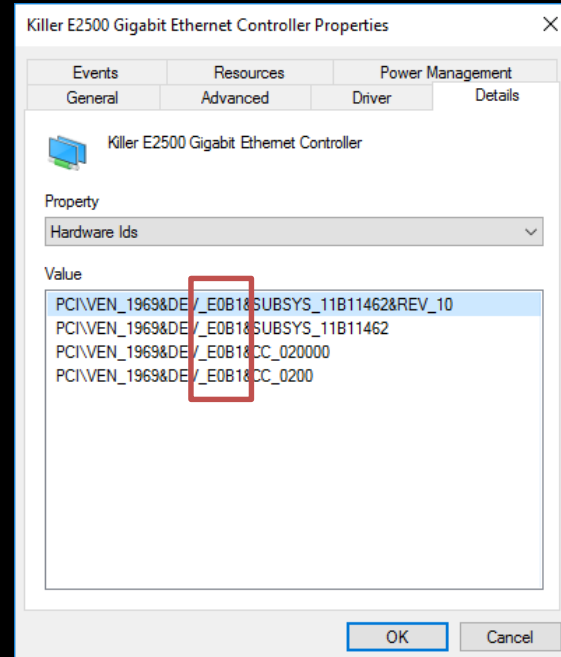

# How to check the LAN chip on notebook?



## 2. Use System Export function in [MSI Help Desk](#)

```
GT62VR_6RD(20161003).txt - 記事本
檔案(F) 編輯(E) 格式(O) 檢視(V) 說明(H)

-----
System Information
-----
Serial Number:          FFFFFFFF
Product Name:           GT62VR 6RD
OS:                     Microsoft Windows 10 Pro 64-bit Ver.1511(OS build 10586.545.amd64fre.th2_release.160802-1857)
Windows Product Key:    WFG6P
HDI Build:              ZS7-16L2TM6-EF1 2.TC3.A26.18.0.1
BIOS Version:           E16L2IMS.10D
BIOS Release Date:      2016/08/17
EC Version:             16L2EMS1.1050817201613:49:23
CPU:                    Intel(R) Core(TM) i7-6820HK CPU @ 2.70GHz
Memory:                 32 GB @ 1066 MHz
                        - 8192 MB, DDR4-2133, Samsung M471A1G43DB0-CPB
                        - 8192 MB, DDR4-2133, Samsung M471A1G43DB0-CPB
                        - 8192 MB, DDR4-2133, Samsung M471A1G43DB0-CPB
                        - 8192 MB, DDR4-2133, Samsung M471A1G43DB0-CPB
Graphics:               NVIDIA GeForce GTX 1060, 6144 MB
VBIOS Version:          86.06.19.00.08.6291456
Drive:                  HDD, HGST HTS721010A9E630, 931.51 GB
Drive:                  SSD, NVMe SAMSUNG MZVPV128, 119.24 GB
Drive:                  HDD, Kingston DataTraveler 3.0, 28.88 GB
Network:                Bluetooth Device (Personal Area Network)
Network:                Killer Wireless-n/a/ac 1435 Wireless Network Adapter
Network:                Killer E2400 Gigabit Ethernet Controller
SHIFT mode:             SportMode
Power Plan:             Power Scheme GUID: 8c5e7fda-e8bf-4a96-9a85-a6e23a8c635c (High performance)

-----
Programs and Features
-----
SteelSeries Engine 3.8.1, 3.8.1,
Synaptics Pointing Device Driver, 19.0.22.0,
Killer Network Manager, 1.1.57.1126, 20160618
Nahimic2UISetup, 2.3.501, 20160925
Killer Wireless-AC Drivers, 1.1.57.1126, 20160618
```