



How to use
HDMI-CEC
function?



THE LEAP TO
SINGULARITY



msi

English version

THE LEAP TO SINGULARITY

 
1.Connect to HDMI port on Monitor

Please connect HDMI cable to HDMI port that **support HDMI-CEC function** on Monitor.

Example on MAG 275CQRF-QD:

Please connect HDMI cable to HDMI port (**Item 9**) on MAG 275CQRF-QD .

8	DisplayPort Supports 2560x1440@170Hz as specified in DisplayPort 1.2a.
9	HDMI™ Connector HDMI™ HIGH-DEFINITION MULTIMEDIA INTERFACE Supports HDMI™ CEC , 2560x1440@144Hz as specified in HDMI™ 2.0b.
10	HDMI™ Connector HDMI™ HIGH-DEFINITION MULTIMEDIA INTERFACE Supports 2560x1440@144Hz as specified in HDMI™ 2.0b.

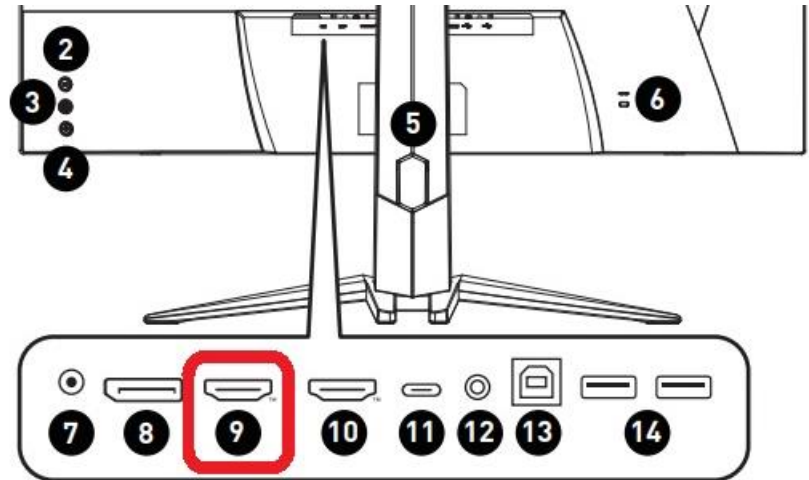

2.Modify HDM-CEC to ON in OSD menu


Please modify HDM-CEC item to ON in OSD menu.

HDMI™ CEC	OFF	• HDMI™ CEC (Consumer Electronics Control) supports Sony PlayStation®, Nintendo® Switch™, Xbox Series X S consoles and various audio-visual devices that are CEC-capable. • If HDMI™ CEC is set to ON: • The monitor will automatically power on when the CEC device is turned on. • The CEC device will enter power saving mode when the monitor is turned off. • When Sony PlayStation®, Nintendo® Switch™, or Xbox Series X S console is connected, Game Mode and Pro Mode will be automatically set to default modes and can be adjusted to users' preferred modes later.
	ON	

3.Modify HDM-CEC to ON in console

3-1: Sony Playstation5 as example:

 - Setting value on Sony Playstation5 :
 1. Settings > System > HDMI > Enable HDMI Device Link > **ON**
 2. Settings > System > HDMI > Enable One-Touch Play > **ON**
 3. Settings > System > HDMI > Enable Power Off Link > **ON**

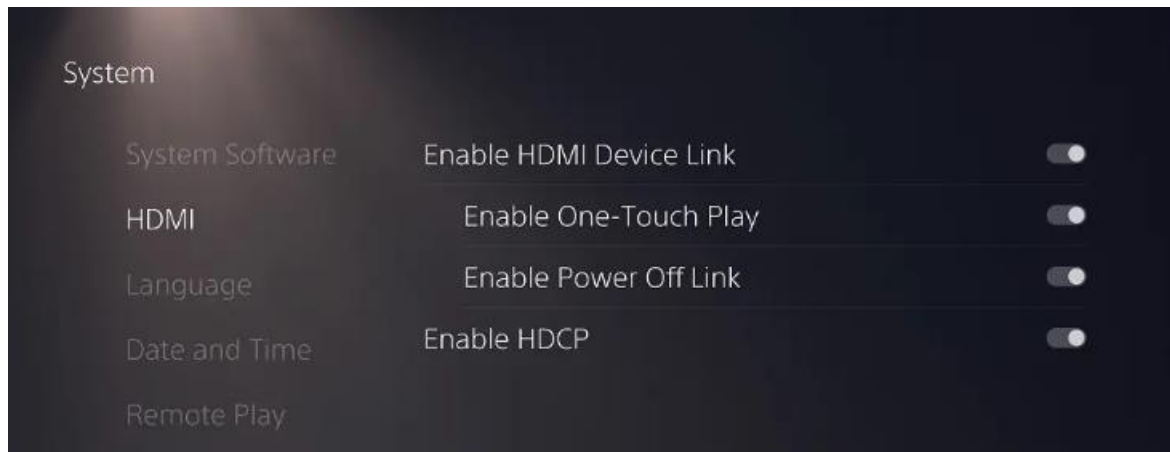


3.Modify HDM-CEC to ON in console

3-2: Nintendo Switch as example:

- Setting value on Nintendo Switch :

System Settings > TV Output > Match TV Power State > **ON**

 Note: Nintendo Switch Lite is not support TV mode.

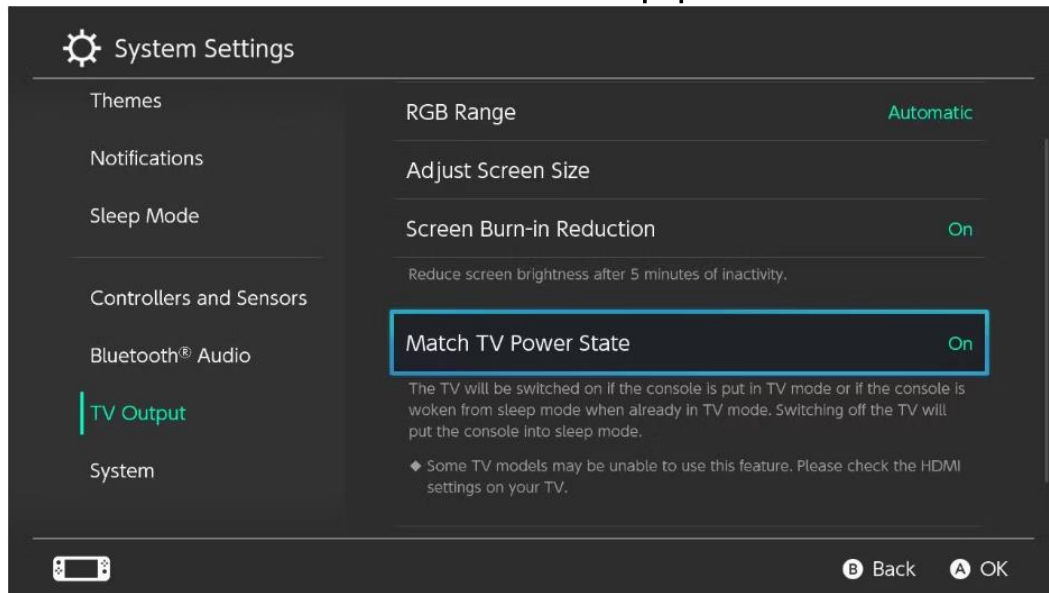

Use HDMI-CEC function

You will be used HDMI-CEC function as below:

- The monitor will automatically power on when the CEC device is turned on.
- The CEC device will enter power saving mode when the monitor is turned off.



msi

简中版

THE LEAP TO SINGULARITY


1.连接到萤幕的HDMI 接口

请将HDMI线连接至萤幕的有支援**HDMI-CEC**的HDMI接口。

以MAG 275CQRF-QD为范例:

只有HDMI接口(**第9项**)才有支援HDMI-CEC。

8	DisplayPort 端口 支持 DisplayPort 端口 1.2a 中指定的 2560x1440@170Hz。
9	HDMI™ 接口 HDMI™ HIGH-DEFINITION MULTIMEDIA INTERFACE 支持 HDMI™ 2.0b 中指定的 HDMI™ CEC , 2560x1440@144Hz。
10	HDMI™ 接口 HDMI™ HIGH-DEFINITION MULTIMEDIA INTERFACE 支持 HDMI™ 2.0b 中指定的 2560x1440@144Hz。

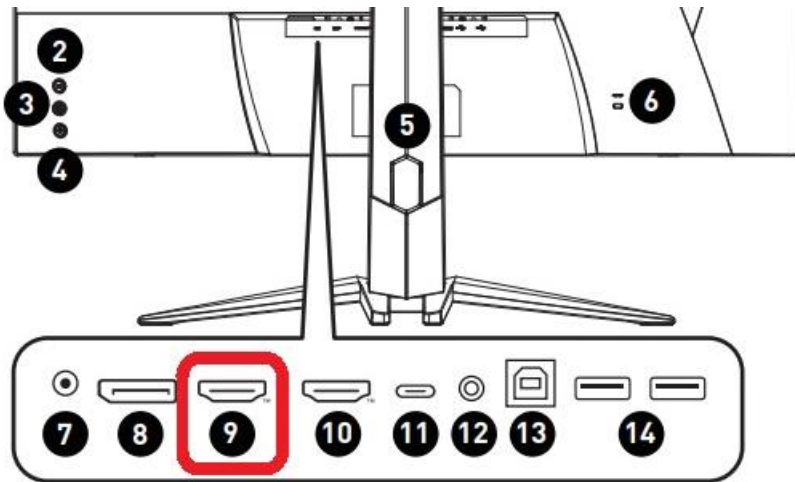 

2.将"HDMI™ CEC" 设定成开

请在萤幕的OSD功能选单中的"HDMI™ CEC"设定成开。

HDMI™ CEC	OFF (关)	• HDMI CEC (Consumer Electronics Control) 支持 Sony PlayStation®, Nintendo® Switch™, Xbox Series X S consoles , 以及各种具有 CEC 功能的视听设备。 • 如果 HDMI™ CEC 设为「开」: • 当 CEC 设备打开时,显示器将自动开机。 • 显示器关闭时,CEC 设备将进入省电模式。 • 连接 Sony PlayStation®、Nintendo® Switch™ 或 Xbox Series X S console 后,「游戏模式」和「专业模式」将自动设为「默认模式」,以后可调整为用户的首选模式。
	ON (开)	

3.修改游戏机的设定值

3-1: 以Sony Playstation5 为范例:

1. 设定 > 系统 > HDMI > 启用HDMI装置关联 > **ON**
2. 设定 > 系统 > HDMI > 启用一键游玩 > **ON**
3. 设定 > 系统 > HDMI > 启用关闭电源关联 > **ON**



3.修改游戏机的设定值

3-2: 以Nintendo Switch为范例:

设置 > 电视机输出 > 同步电视机电源 > 开启

怎样设置switch“同步电视机电源”

<https://jingyan.baidu.com/article/ed15cb1b5521615ae36981bc.html>



使用HDMI™ CEC功能

您可以使用"HDMI™ CEC"功能如下:

- 当CEC设备被开启时，显示器将会自动 开启。
- 当显示器被关闭时，CEC设备将会进入省电模式。



msi

中文版

THE LEAP TO SINGULARITY


1. 連接到螢幕的HDMI連接埠

請將HDMI線連接至螢幕的有支援**HDMI-CEC**的HDMI連接埠。

以MAG 275CQRF-QD為範例:

只有HDMI連接埠(第9項)才有支援**HDMI-CEC**。

8	DisplayPort 連接埠 支援 DisplayPort 1.2a 所規範的 2560x1440@170Hz。
9	HDMI™ 連接埠 HDMI™ 支援 HDMI™ CEC 、HDMI™ 2.0b 所規範的 2560x1440@144Hz。
10	HDMI™ 連接埠 HDMI™ 支援 HDMI™ 2.0b 所規範的 2560x1440@144Hz。

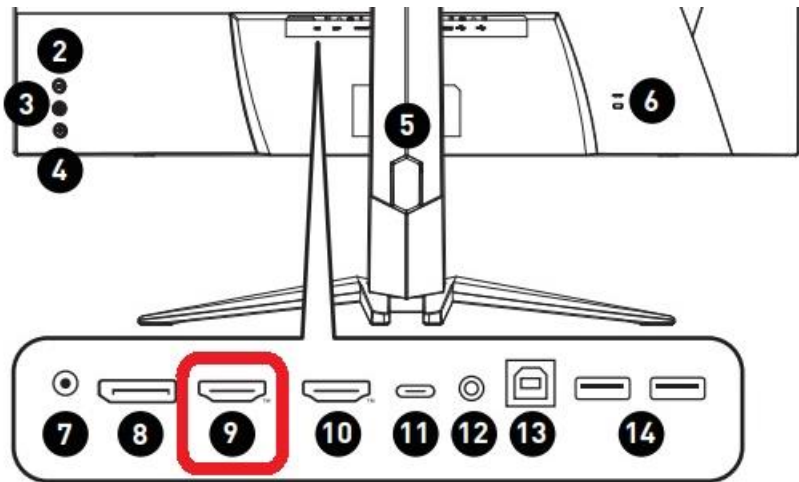 

2.將(HDMI™ 消費電 子設備控制) 設定成開

請在螢幕的OSD功能選單中的"**HDMI™ 消費電 子設備控制**"設定成開啟。

第 1 層功能表	第 2 層功能表	說明
HDMI™ CEC (HDMI™ 消費電 子設備控制)	OFF (關)	• HDMI™ CEC (Consumer Electronics Control) (消費電子設備控制) 支援索尼 Sony PlayStation®、任天堂 Nintendo® Switch™、Xbox Series X S 主機以及各種內建 CEC 功能的視聽設備。 • 如果「HDMI™ 消費電子設備控制」設定為「開」： • 當 CEC 設備被開啟時，顯示器將會自動開啟。 • 當顯示器被關閉時，CEC 設備將會進入省電模式。 • 連接索尼 Sony PlayStation®、任天堂 Nintendo® Switch™、Xbox Series X S 主機後，Game Mode (遊戲模式) 和 Pro Mode (專業模式) 將自動設定為預設模式，後續可重新調整為個人的偏好模式。
	ON (開)	

3.修改遊戲主機的設定值

3-1: 以Sony Playstation5 為範例:

1. 設定 > 系統 > HDMI > 啟用HDMI裝置連接 > **ON**
2. 設定 > 系統 > HDMI > 啟用一鍵遊玩 > **ON**
3. 設定 > 系統 > HDMI > 啟用電源關閉連結 > **ON**



3.修改遊戲主機的設定值

3-2: 以任天堂Switch為範例:

1. 設定 > 電視輸出 > 連結電視的電源 > 開啟

備註: Nintendo Switch Lite不支援TV模式。



使用HDMI™ 消費電 子設備控制功能

您可以使用"HDMI™ 消費電 子設備控制"功能如下:

- 當CEC設備被開啟時，顯示器將會自動 開啟。
- 當顯示器被關閉時，CEC設備將會進入省電模式。



msi

THE LEAP TO SINGULARITY

