

[How To] Use Stereo Mix

Stereo Mix allows the user to make a recording of everything coming out of the notebook's audio. So if the user is listening to music on the headphone/speaker and talking into the mic at the same time, the system could record both of those at once by using "Stereo Mix".


In a recording application such as Audacity, the user could set the audio source to be Stereo Mix instead of the microphone.

How to enable Stereo Mix

1. Right click on the audio icon in the system tray, and select "Recording devices" to open Windows sound setting panel.



2. In the Recording setting page, right click on a blank area and make sure both "View Disabled Devices" and "View Disconnected Devices" options are checked.

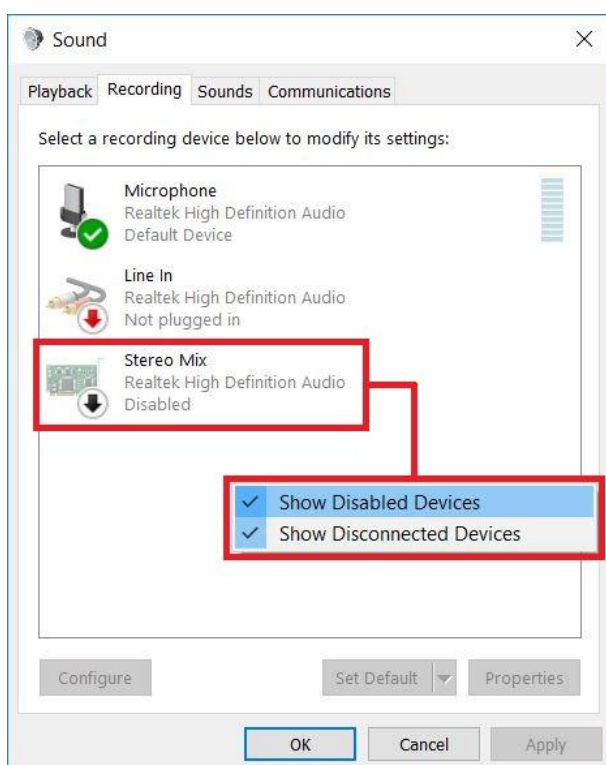


The “Stereo Mix” option should appear.


i If “Stereo Mix” option doesn’t display in the Recording setting page, please update the latest version of Realtek audio driver and Nahimic on MSI website.

FAQ [\[How To\] Nahimic Clean Install & Update](#)


3. Right click on “Stereo Mix” and click “Enable” to be enable it.

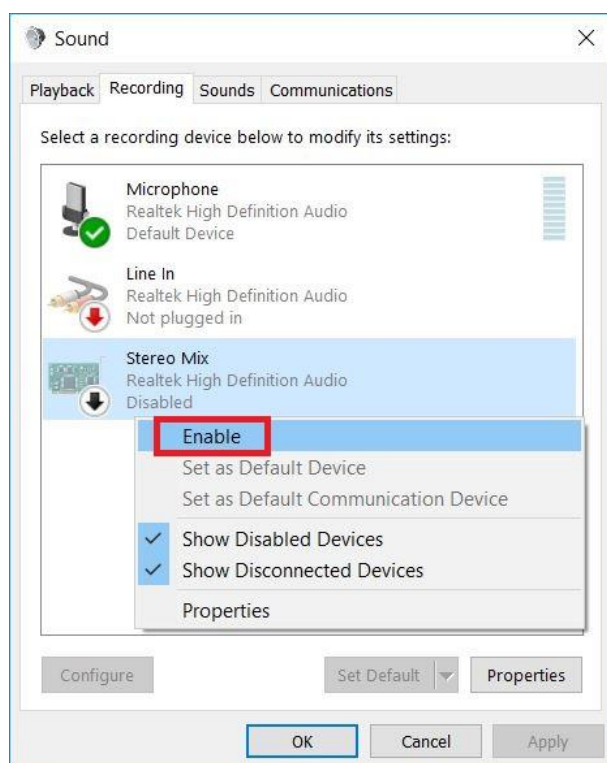


4. If the recording program doesn't have "Stereo Mix" option for selecting, please set "Stereo Mix" as default recording device in Windows sound setting panel.

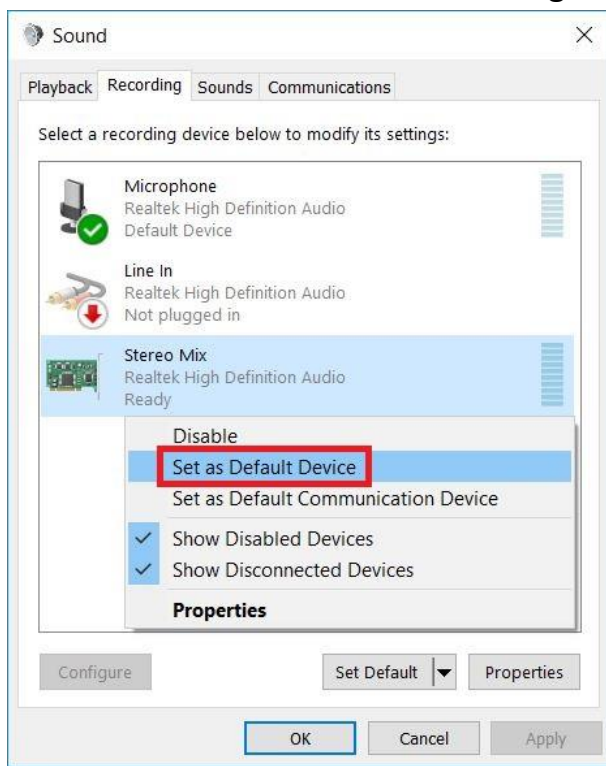

5. Open the recording program and select "Stereo Mix" as the recording device. Here using Audacity as an example.

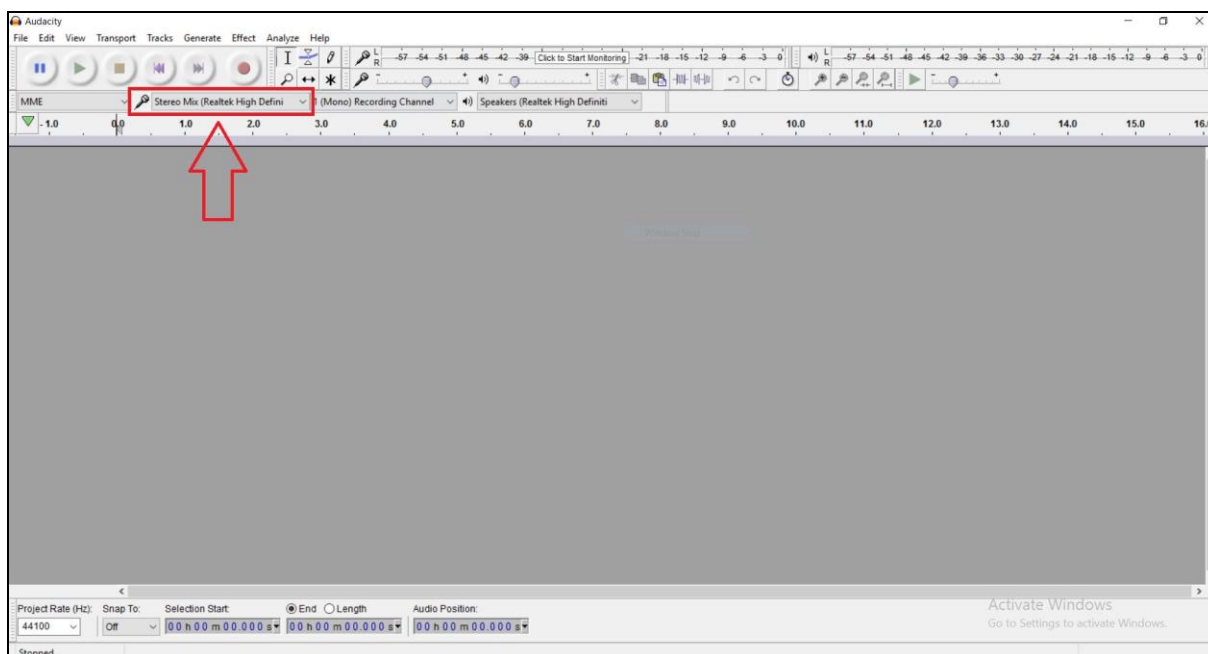

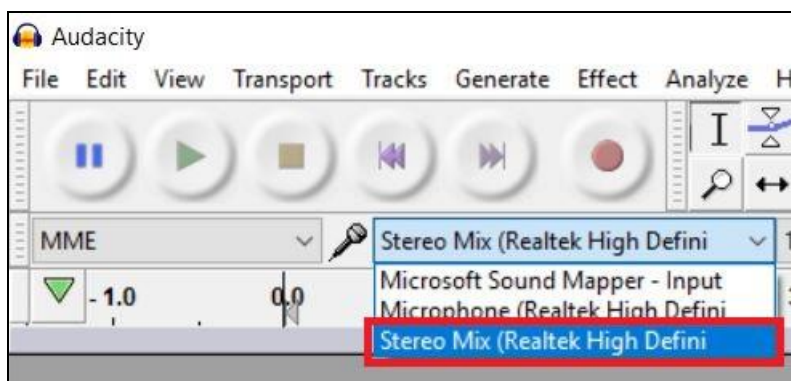

i If the user also want to record the vocal voice with the same software by microphone, please enable “Microphone Loopback” in Nahimic or “Listen to this device” in Windows sound setting panel.

