 


FAQ No. 0784**MSI Gaming mouse DS101 frequency asked questions**

Affected Model: All

Q1: How could I access the configuration menu after I finish installing the MSI gaming mouse driver?

 
A1: Please reboot your system, and the icon symbol will appear in the right-hand side of the Windows taskbar. You could double click the “MSI Gaming mouse” icon symbol and launch the configuration menu.

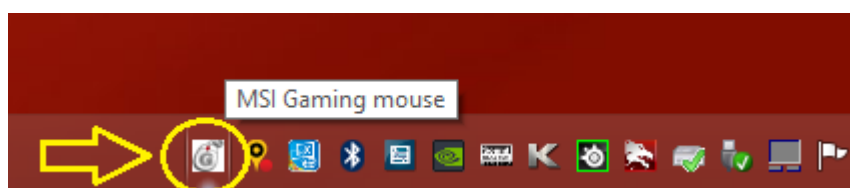

Q2: How could I switch the mouse button 1-7(mode1) and 8-14(mode2)?

A2: This MSI gaming mouse includes 14 buttons for using, and the buttons 1-7 belong to Mode 1 and buttons 8-14 belong to Mode 2. User should set mode switch button to switch between Mode1 and Mode2 (Pic1).

The MOUSE SWITCH setting only allows user to adjust the button 1-7/8-14 settings (Pic2)

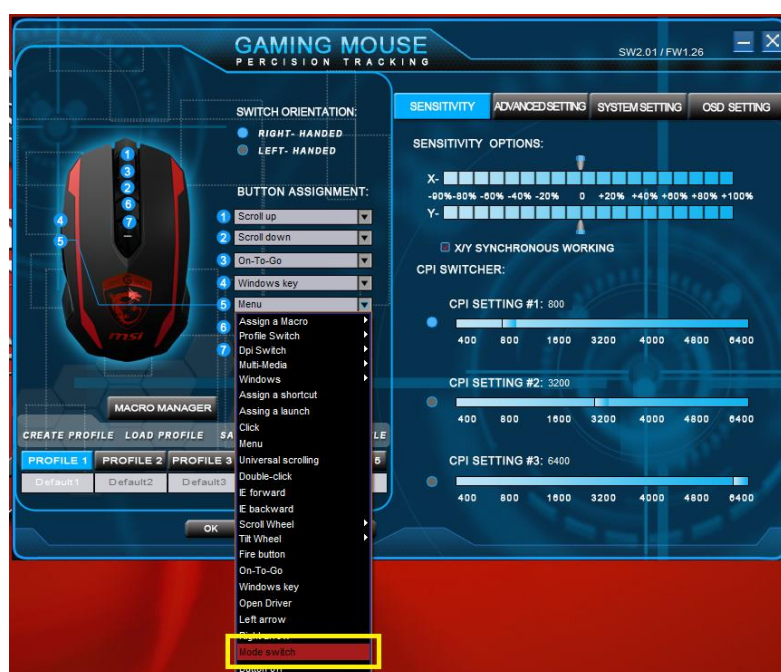

(Pic1)



(Pic2)

Q3: Why can't I change the macro option when I start recording macro?

A3: You can't change the macro option when you are recording the marco. You should set the options before you start recording marco.



Q4: What is the function of DPI Up and DPI Down?

A4: The function of DPI Up/Down is related to the mouse speed, the bigger value of DPI makes the mouse faster.

Under page [SENSITIVITY], there are 3 default settings of CPI switch and they are 800/3200/6400. The bigger value of CPI makes the mouse faster and you could use DPI Up/Down function button to adjust mouse speed. These CPI settings are adjustable if you want to personalize your settings from 400 – 6400.

