




How to clear BIOS administrator password

- **To clear BIOS administrator password.
Please follow the instructions to clear it.**

Step 1 – Entry BIOS Configuration




- Restart system, then keep press "**Del**" key to entry BIOS. Then Type Administrator password.

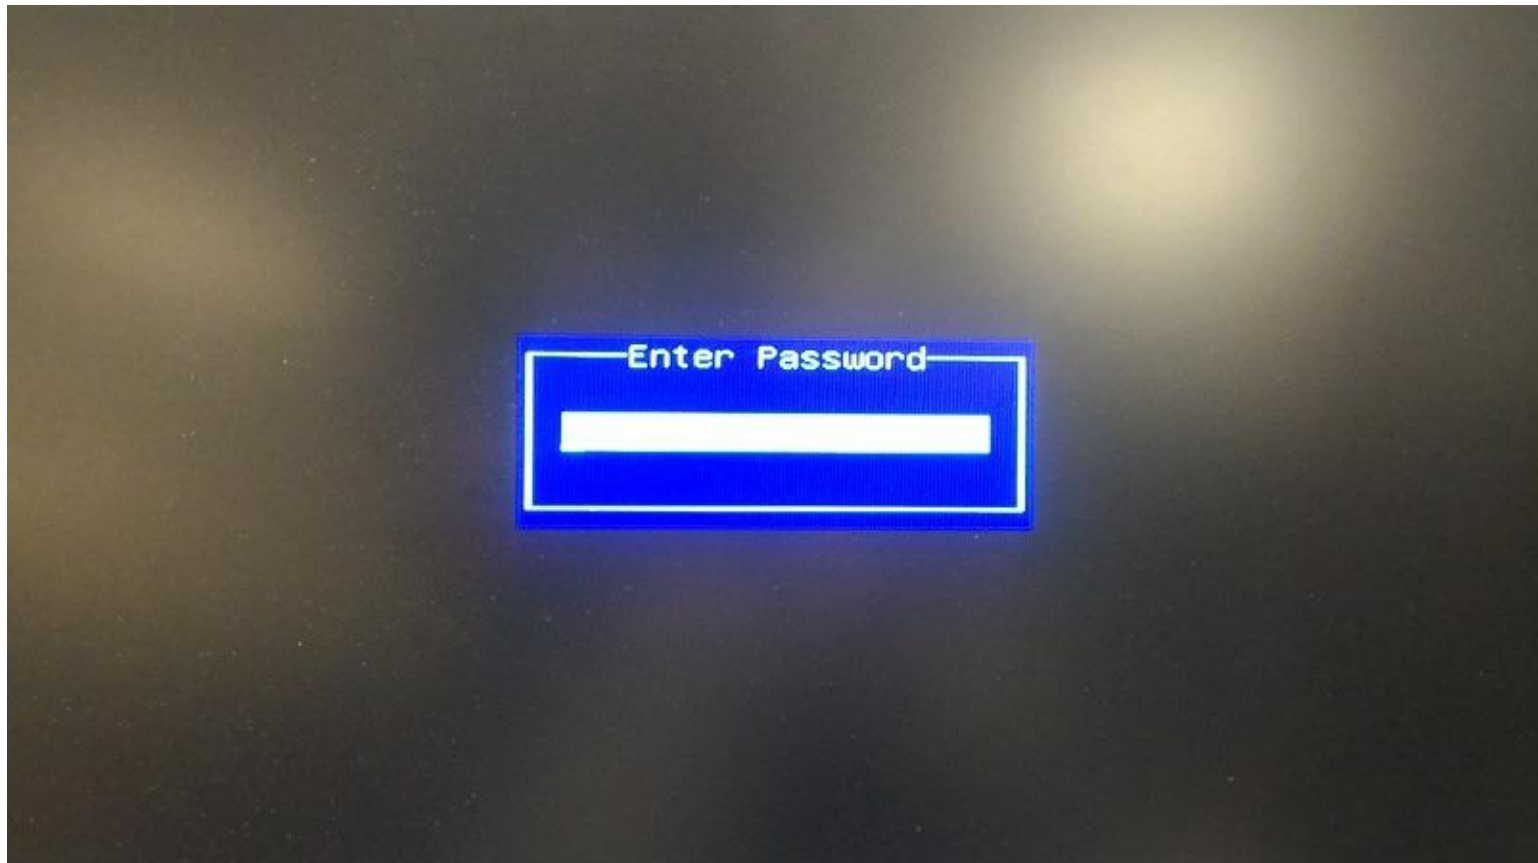

Step 2 – Type Password




- Select to **Security** -> **Administrator Password**.
- Then type your current password.

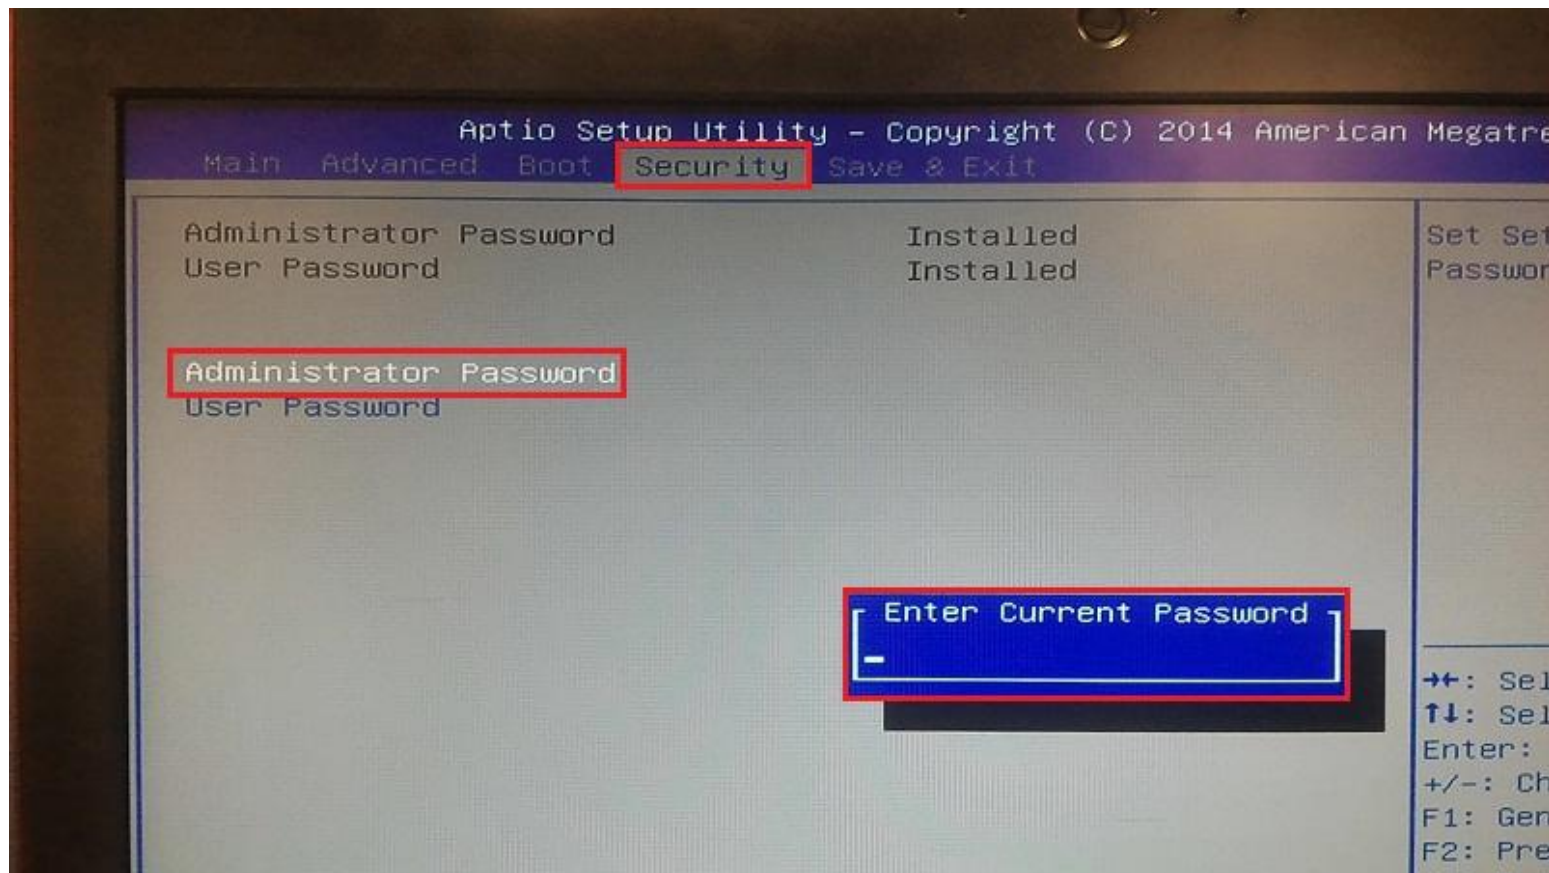

Step 3 – Clear password




- Then leave **empty** in **Create New Password**.

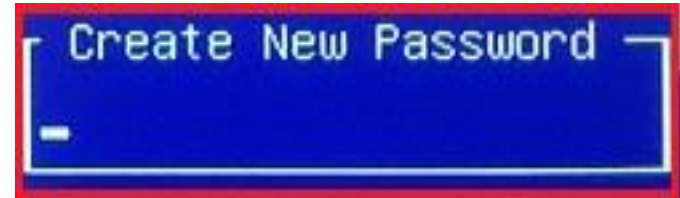

- It pops a notice message to clear old password. Press "**Yes**" to continue.




- Password status change to **Not Installed**

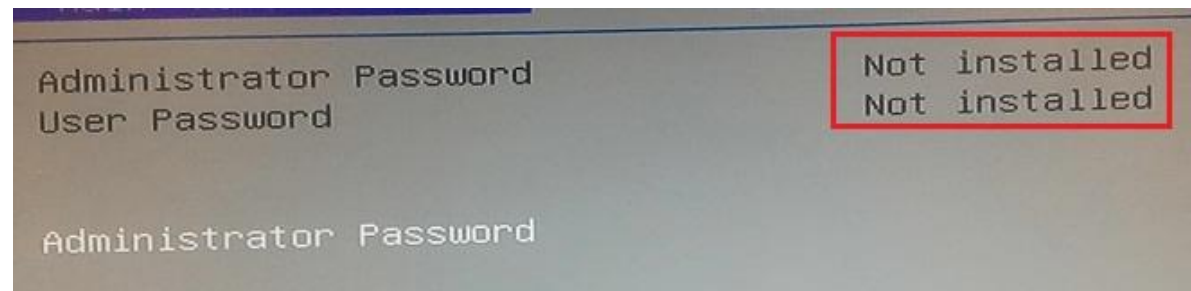

Step 4 – Save & Exit



- Select to **Save & Exit** -> **Save Changes and Reset** -> Press **"Yes"** then exit BIOS.

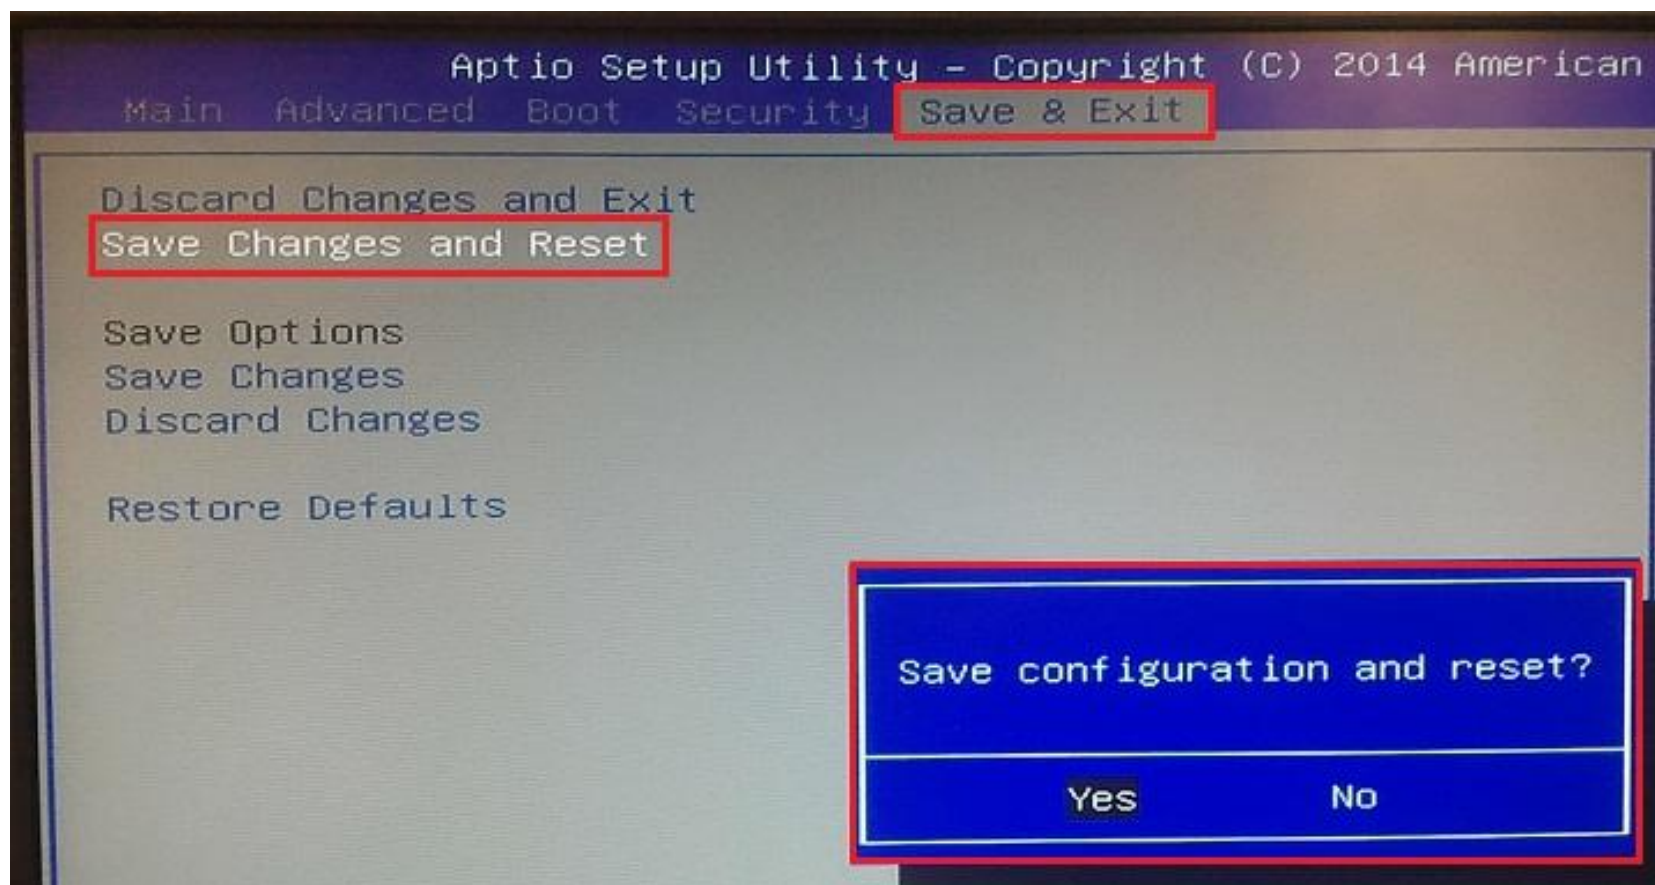

**Thanks for
your attention**

msi[™]