



# How to Enable Mystic Light in PC

Mystic Light is a beautiful feature for gaming desktop.

Currently, Nightblade MI2, MI3, Aegis series, Trident series, and Infinite A support it.

Here is the instruction to guide you how to enable Mystic light in PC.

Note: Nightblade MI2C is classical release in beginning. So it doesn't support Mystic Light.

# Step 1 – Entry Gaming Center



1. Double click “**Gaming Center**” on Windows desktop or task bar.
2. Select -> “**Mystic Light**” -> It will show how many **light mode** you can setup.



3. The Mystic light mode depends on different PC model. Some PC provide more than 4 mode. E.g. Aegis Ti Support **8** mode.

**Note:** Audio mode need to play music or song for active and use headphone or headset.


## Step 2 – Advance function for Mystic Light (1)



### 1. Lighting in Sleep mode

Some of model support lighting when PC in sleep status.


You can check the function in Gaming Center then PC will lighting when PC in sleep status.

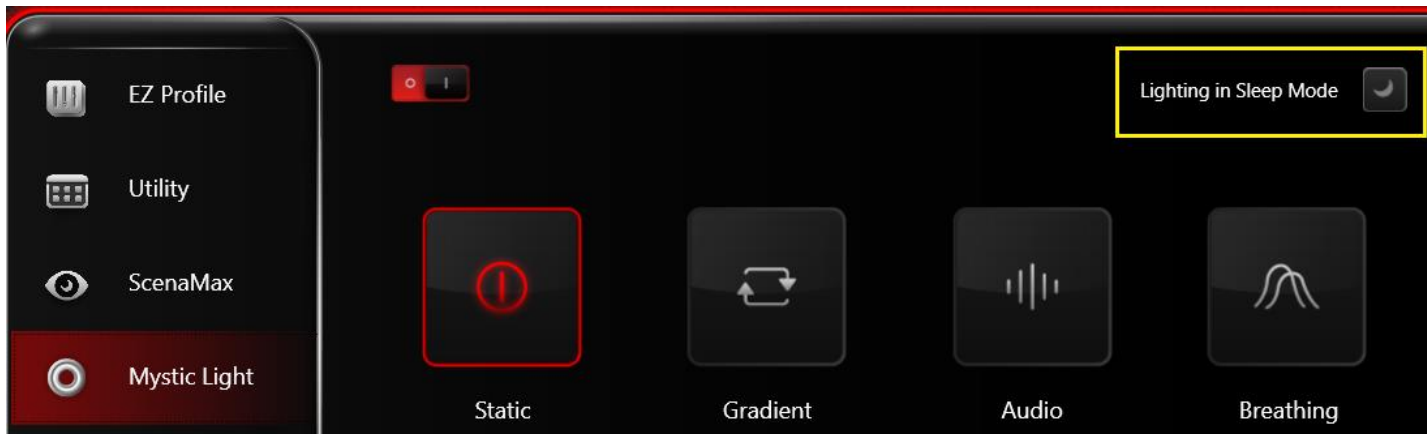

### 2. Remote LED Control (Android Only) (Aegis X, X3 and Aegis Ti & Ti3 only)

You can download App to your smart phone then remote control LED by the phone.

App download path: [MSI Mystic Light for Desktop](#) (Gaming Center 1.32 above support it)

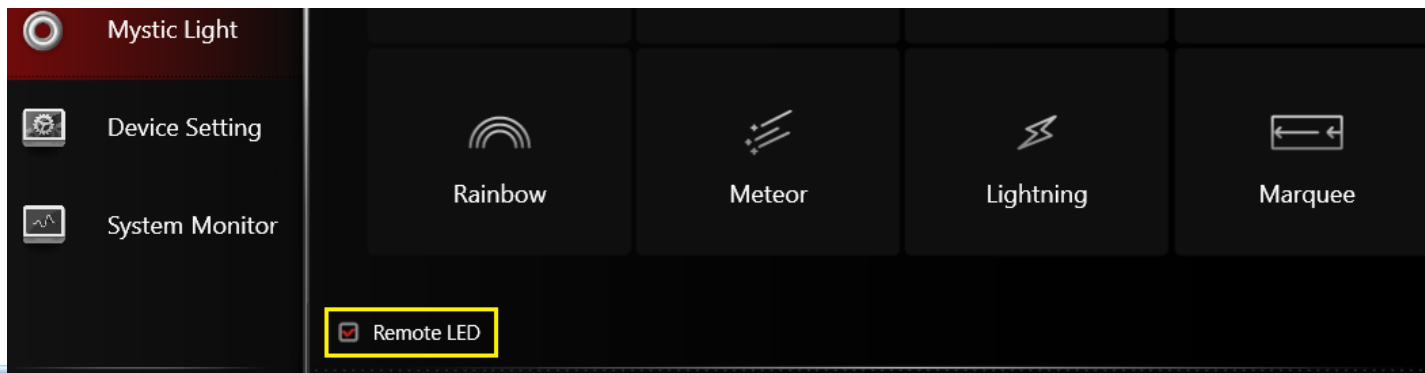

## Step 2 – Advance function for Mystic Light (2)




### 3. Customize panel Color

Aegis Ti provide more panel color can modify.

Press “**Static**” in Mystic Light. It will show the windows as below.

Then you can setup color you desire in different position or all of panel display one color.

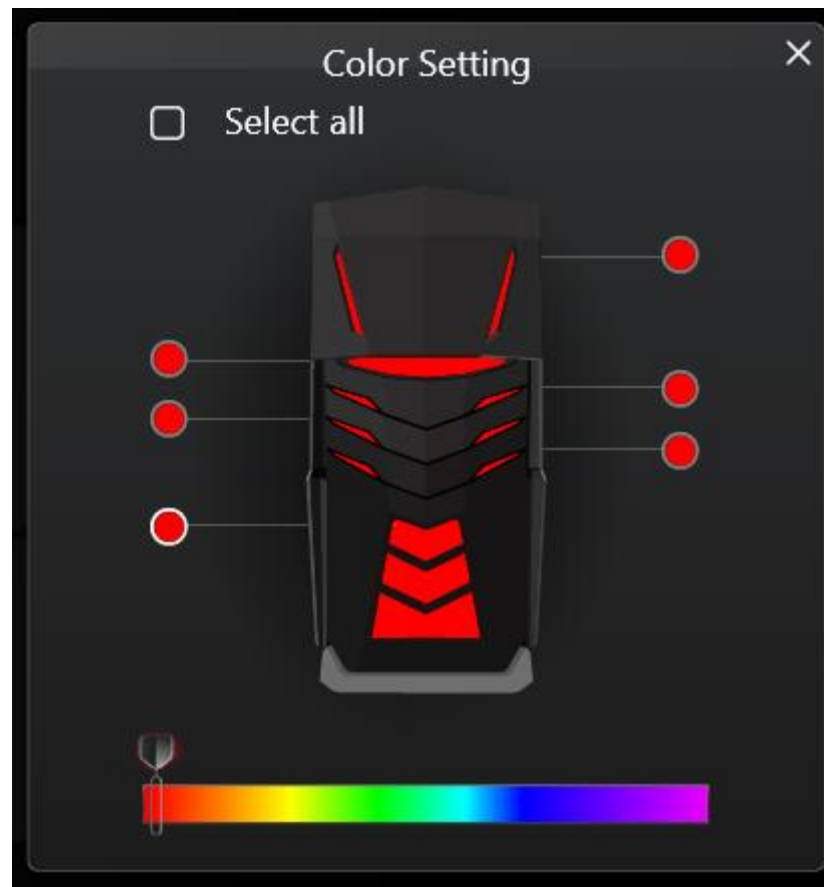

**Thanks for  
your attention**

***msi***<sup>TM</sup>