



**msi**<sup>®</sup>

How to reset monitor  
G27C/G27C2/G24C/AG32C

---

G.A.M.E. UNLIMITED

---



**BEST MEETS BEST**  
**REACH NEW HEIGHTS**



**SOME ARE PC, WE ARE GAMING**

**TRUE GAMING**

# How to reset monitor


1. Press “**M**” button front of monitor then select “**Other**”  
Press “**E**” button front of monitor to next stage.



2. Select “**Reset**” then press “**E**”



3. Select “**Yes**” then press “**E**”

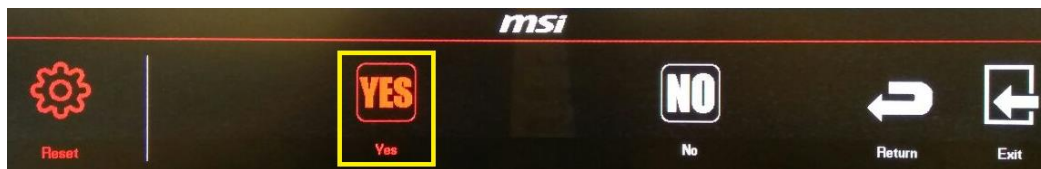

**Note:** Some configuration cannot be reset, E.g. Color Temp user mode.



***msi***®

**TRUE  GAMING**

**SOME ARE PC, WE ARE GAMING**