


How To Enable/ Disable AMD Virtualization In BIOS

The AMD Virtualization has been enabled in the default settings. If any change is required, please refer to the guide below.


A. AMD IOMMU:

1. Boot up the laptop and press [DEL] to open BIOS menu.
2. Go to Advanced -> IOMMU (Default: Enable).
3. Select the desired setting (Enabled/ Disabled).

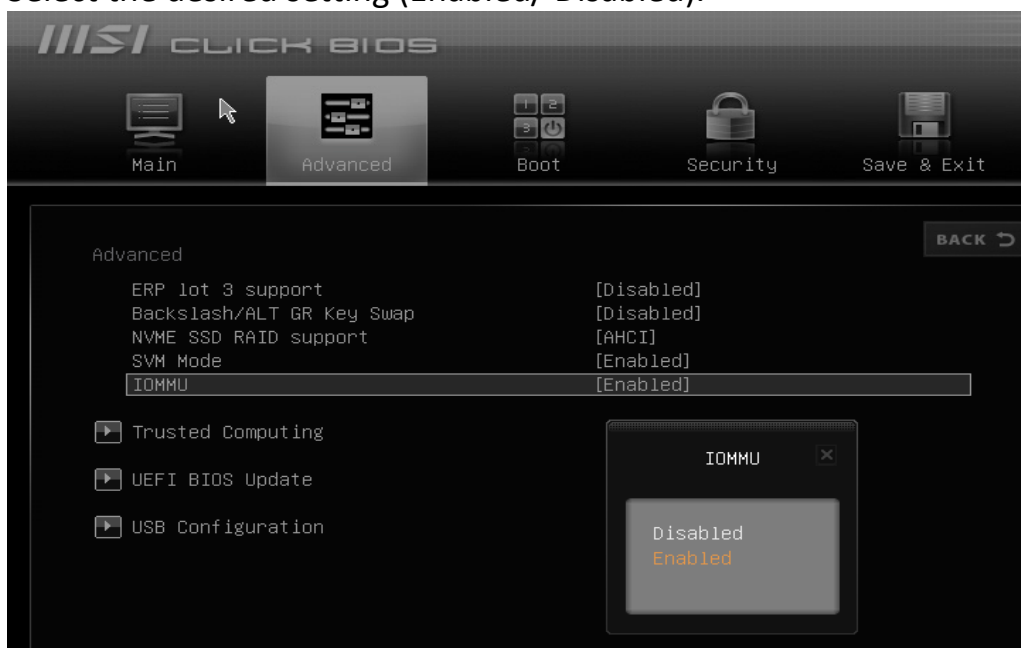

B. AMD SVM

4. Go to Advanced -> SVM Mode (Default: Enable).
5. Select the desired setting (Enabled/ Disabled).

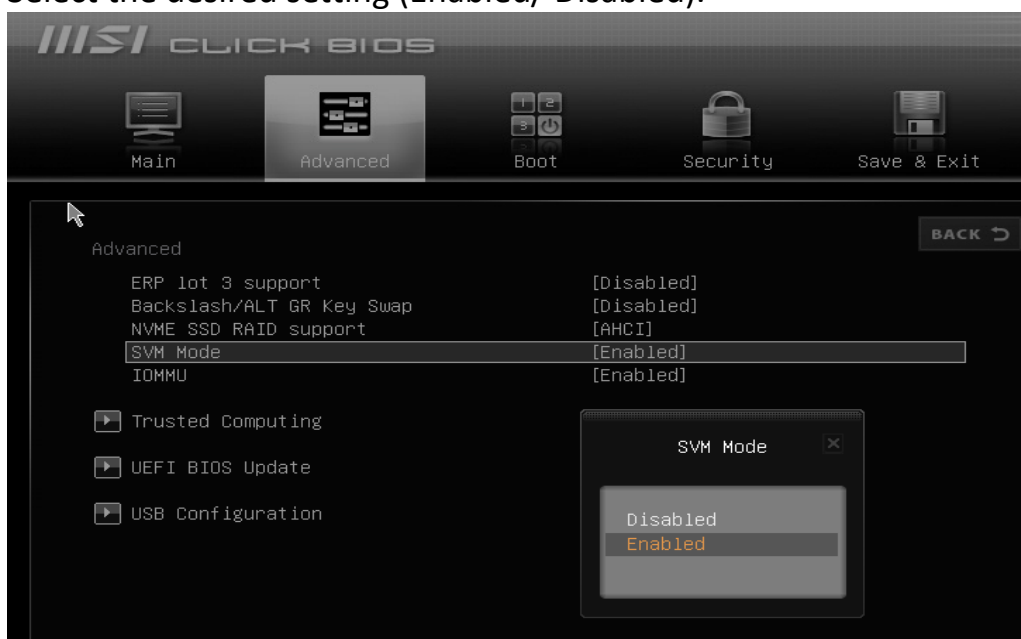

6. Press [F10] to save and exit.